




2011 SUZUKI GSXR 600/750 UNDERTAIL INSTRUCTIONS

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! WHEN IN DOUBT, CALL US! TOLL FREE 800-555-2805




1. Remove the rear seat.

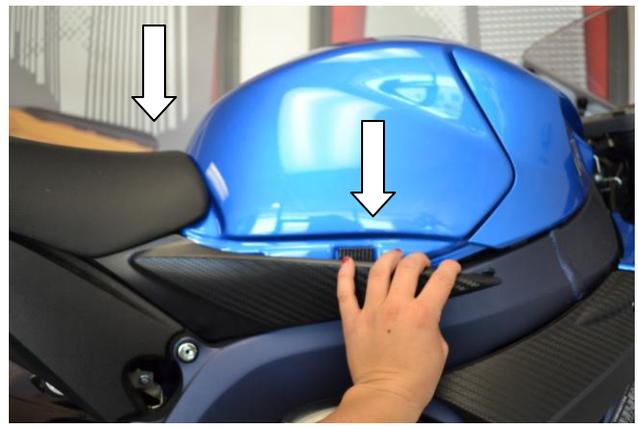

2. Remove the black fairing pieces from each side of the tank/ front seat, being careful not to break the tabs.




3. Remove the 2 bolts that are holding the front seat to the frame.

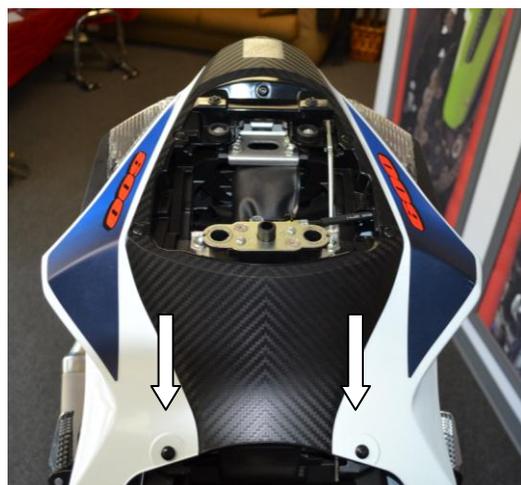

4. Remove the 2 screws that are holding the side tail fairings to the bike.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

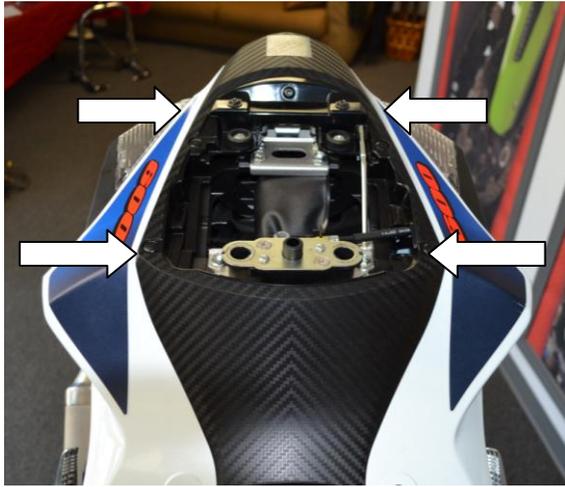

5. Remove the 4 pop rivets that are located on the top of the tail.




6. Remove the 4 pop rivets that are located on the underside of the side tail fairings.



7. Pull the left side tail fairing piece, and disconnect the electrical. Leaving the lock mechanism attached let fairing hang.



8. Pull right side tail fairing, and disconnect the electrical. Remove from bike completely.

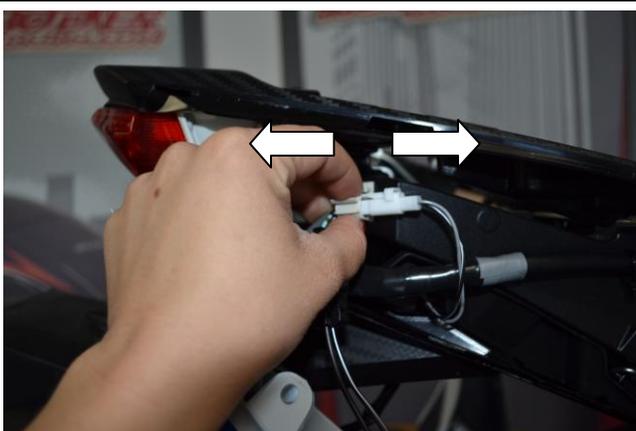

9. Disconnect the electrical running to the mud flap (located on the right side of tail).




10. Remove the 4 bolts that hold the mud flap to the bike.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Holbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.




11. Pull the mud flap to remove completely from bike.

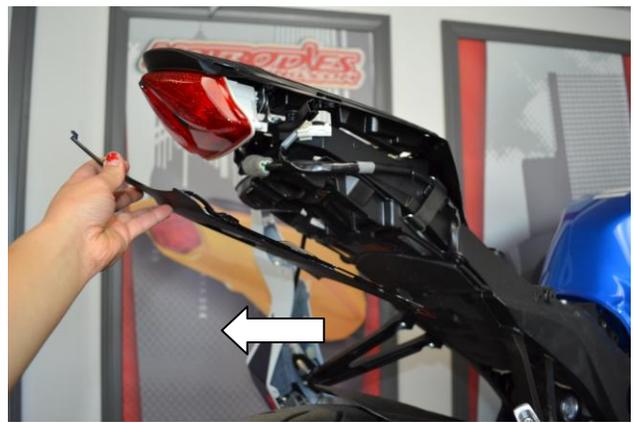


12. Remove the stock undertail from bike, being careful not to break clips.




13. Install the new Hotbodies Racing undertail. The tabs at the bottom will be located between the battery box and bolts. The top will clip into place.

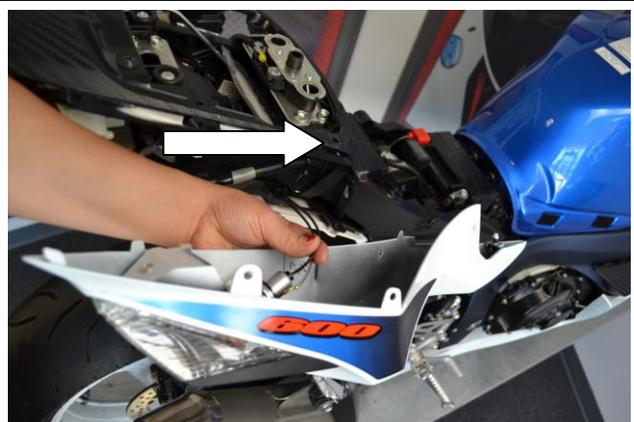

14. Reinstall the side tail fairings, and connect the electrical.

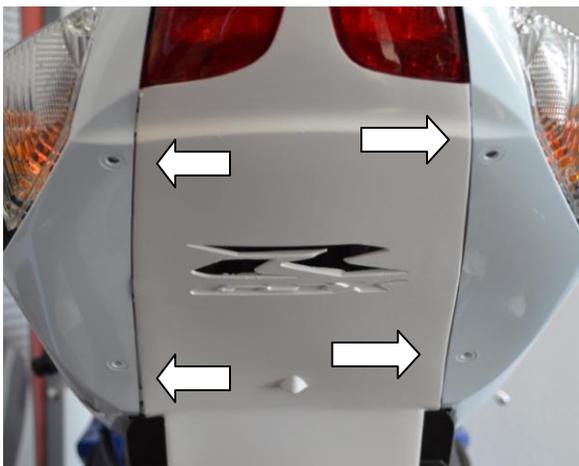


15. Reinstall 4 pop rivets on the bottom of the side tail fairings.

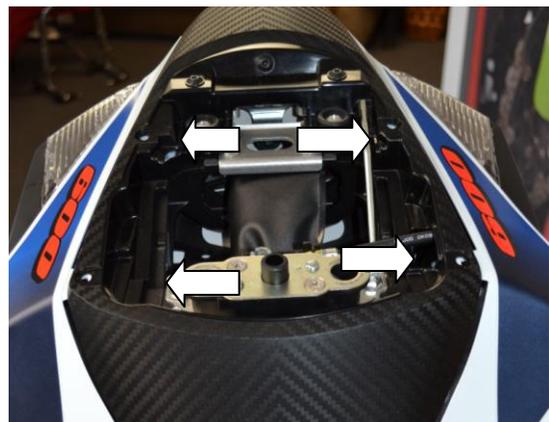

16. Reinstall 4 pop rivets that are located on the top of the tail.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

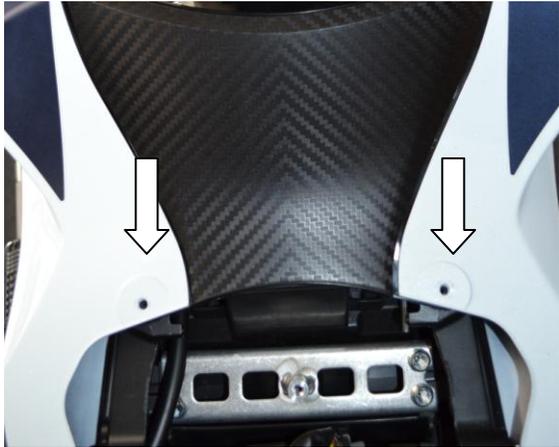

17. Reinstall from 2 screw located on the front of the side tail fairings.



18. Reinstall the front seat, tightening the 2 bolts.



19. Reinstall the black faring pieces on each side of